



序号	零部件编码	零部件名称	零部件名称	数量
Ref.No.	Part No.	Description	Description	Quantity


YX125 kick start spare parts list

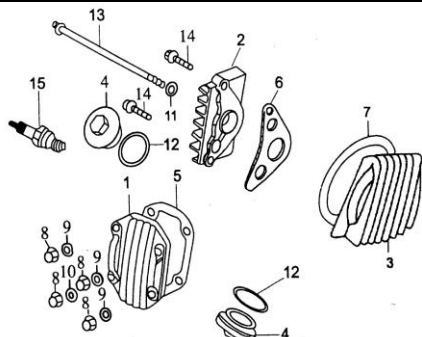


E-1 气缸头盖 Cylinder Head Cover				
序号	零部件编码	零部件名称	零部件名称	数量
Ref.No.	Part No.	Description	Description	Quantity
1	204A036	气缸头盖	Cover, Cylinder Head	1
2	204A035	气缸头右盖	Cylinder Head Cover, RH	1
3	204A033	气缸头左盖	Cylinder Head Cover, LH	1
4	D00A032	气门盖	Cover, Valve	2
5	204B009	气缸头盖密封垫	Gasket, Cylinder Head Cover	1
6	204B007	气缸头右盖密封垫	Gasket, Cylinder Head Cover, RH	1
7	D00B006	气缸头左盖密封垫	Gasket, Cylinder Head Cover, LH	1
8	204-1-8	盖形螺母M6	Cap Nut M6	4
9	204-1-9	铁垫圈6	Steel Washer 6	3
10	204-1-10	铜垫圈6	Copper Washer 6	1
11	D00L020	铝垫圈6	aluminium Washer 6	1
12	204-1-12	气门盖O型圈30.8×3.2	O-ring 30.8×3.2	2
13	96006110	带盘螺栓M6×110	Bolt M6×110	1
14	204-1-14	螺栓M6×20	Bolt M6×20	2
15	F001D021	火花塞	Spark Plug	1

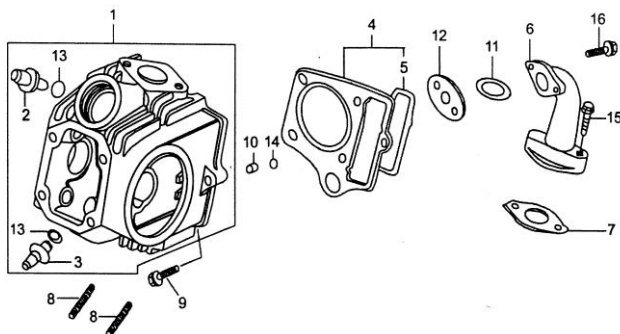


E-2 气缸头 Cylinder Head				
序号	零部件编码	零部件名称	零部件名称	数量
Ref.No.	Part No.	Description	Description	Quantity
1	204A000	气缸头组件	Cylinder Head Sub-Assy	1
2	204-2-2	进气门导管	Guide, Intake Valve	1
3	204-2-3	排气门导管	Guide, Exhaust Valve	1
4	204B008	气缸头密封垫	Gasket, Cylinder Head	1
5	204-2-5	链条腔封环组合	Gasket, Chain Bousing	1
6	204-2-6	进气管	Inlet Pipe	1
7	204-2-7	进气管密封垫	Gasket, Inlet Pipe	1
8	D00M009	双头螺栓M6×32	Stud M6×32	2
9	D00M015	连接螺栓M6×23	Bolt M6×23	1
10	204-2-10	翻边衬套Φ8×9	Sleeve Φ8×9	1
11	204-2-11	O型密封圈25.4×2.4	O-Ring 27×2.0	1
12	204-2-12	进气管胶木垫	Insulating Mat, Inlet Pipe	1
13	204-2-13	导管O型圈9×1.6	O-Ring 9×1.6	2
14	204-2-14	矩形圈9×11.7×1.5	Rectangular Ring 9×11.7×1.5	1
15	204-2-15	螺栓M6×28	Bolt M6×28	2
16	204-2-16	螺栓M6×22	Bolt M6×22	2

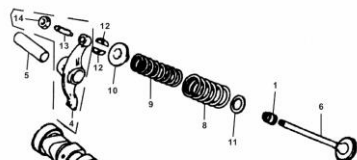


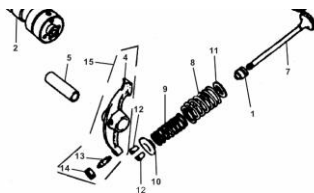

E-3 凸轮轴 气门 Camshaft & Valves				
序号	零部件编码	零部件名称	零部件名称	数量
Ref. No.	Part No.	Description	Description	Quantity
1	D00C043	挡油罩	Oil seal, Valve Stem	2
2	A00F020	凸轮轴组件	Camshaft Assy	1
4	D00F000	气门摇臂组件	Rocker Arm, Valve	2
5	D00F015	摇臂轴	Shaft, Rocker Arm	2
6	204F045	进气门	Intake Valve	1
7	204F039	排气门	Exhaust Valve	1
8	D00H003	气门外弹簧	Outer Spring, Valve	2
9	D00H004	气门内弹簧	Inner Spring, Valve	2
10	D00F034	气门内外弹簧座	Spring Retainer, Upper	2
11	204-3-11	气门外弹簧座圈	Spring Retainer, Outer	2
12	D00F033	气门锁夹	Spring Cone, Valve	4
13	204-3-13	气门间隙调节螺钉	Adjusting Screw, Valve Gap	2
14	204-3-14	气门间隙调节螺母	Lock Nut	2
15	D00F000	气门摇臂组件	Rocker Arm Assy	2

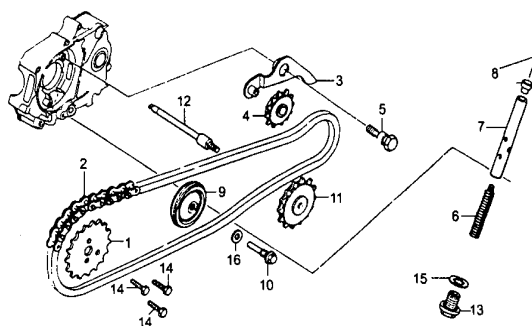


E-4 正时链条 张紧器 Timing Chain & Tensioner				
序号	零部件编码	零部件名称	零部件名称	数量
Ref. No.	Part No.	Description	Description	Quantity
1	A00F011	正时从动链轮(28T)	Timing Driver Sprocket(28T)	1
2	D00F012	正时链条(84T)	Timing Chain(84T)	1
3	D00F043	链条张紧臂组件	Tensioning Arm	1
4	D00C020	链条张紧滚轮组件	Tensioning Roller	1
5	D00F044	链条张紧臂芯轴	Screw	1
6	D00H006	链条张紧杆弹簧	Spring	1
7	D00F042	链条张紧杆组件	Tensioning Bar	1
8	204-4-8	链条张紧杆头	Cap	1
9	D00C023	链条导向滚轮组件	Guiding Wheel	1
10	D00F048	导向滚轮销轴	Pin, Guiding Wheel	1
11	204-4-11	机油泵链轮	Drive Sprocket, Oil pump	1
12	204-4-12	机油泵链轮轴	Sprocket Shaft, Oil pump	1
13	D00E025	密封螺塞14	Sealing Plug M14×1.5	1
14	578305012	六角螺栓M5×12	Bolt M5×12	3
15	D00L021	铝垫圈14	Aluminium Washer 14	1
16	D00L019	铝垫圈8	Aluminium Washer 8	1

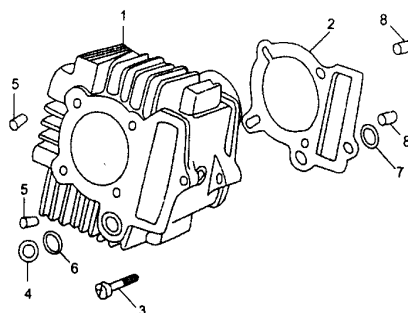


E-5 气缸体 Cylinder				
序号	零部件编码	零部件名称	零部件名称	数量
Ref. No.	Part No.	Description	Description	Quantity
1	204A038	气缸体	Cylinder Block	1

2	204B010	气缸体密封垫	Gasket, Cylinder Block	1
3	D00M015	连接螺栓M6×23	Bolt M6×23	1
4	204-5-4	垫圈	Washer	1
5	97010014	定位销10×14	Dowel pin 10×14	2
6	204-5-6	矩形密封圈14.5×18.5×2.4	Rectangular Ring 14.5×18.5×2.4	1
7	204-5-7	矩形密封圈11.5×15.7×2.4	Rectangular Ring 11.5×15.7×2.4	1
8	97008012	定位销8×12	Dowel pin 8×12	2

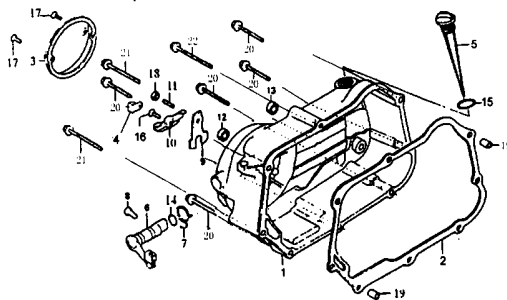


序号	零部件编码	零部件名称	零部件名称	数量
Ref.No.	Part No.	Description	Description	Quantity
1	D01A034	右曲轴箱盖	Right Crankcase Cover	1
2	E04B002	右曲轴箱盖密封垫	Gasket, Crankcase Cover, RH	1
3	204-6-3	小圆盖	Clutch Cover	1
4	204-6-4	点火线圈线夹	Wire Clamp	1
5	D00C038LH	机油标尺	Dipstick	1
6	204-6-6	离合器操纵杆组合	Operating Shaft, Clutch	1
7	204-6-7	离合器操纵杆弹簧	Spring	1
8	204-6-8	离合器操纵杆定位销	Set Pin	1
9	204-6-9	离合器拨板	Control Plate	1
10	204-6-10	离合器操纵杆压板	Press Plate	1
11	204-6-11	离合器调节螺杆	Screw	1
12	A00C012	推杆油封12×21×4	Oil Seal 12×21×4	1
13	D00C016	油封13.7×24×5	Oil Seal 13.7×24×5	1
14	204-6-14	O形圈	O-Ring	1
15	D00C060	O型密封圈18×3.5	O-Ring 18×3.5	1
16	81906016	平头螺钉M6×16	Screw M6×16	1
17	204-6-17	螺钉5×12	Screw 5×12	2
18	204-6-18	六角螺母8mm	Hex Nut 8MM	1
19	97008012	定位销8×12	Dowel Pin 8×12	2
20	96006040	带盘螺栓M6×40	Bolt 6×40	5
21	96006080	带盘螺栓M6×80	Bolt 6×80	2
22	96006065	带盘螺栓M6×65	Bolt 6×65	1

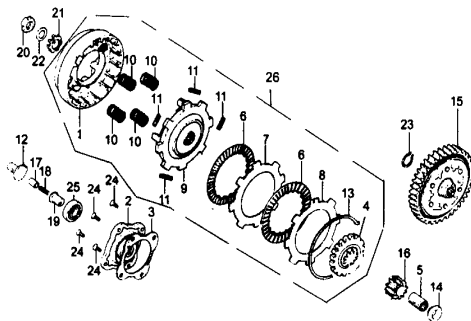


序号	零部件编码	零部件名称	零部件名称	数量
Ref.No.	Part No.	Description	Description	Quantity
1	204-7-1	离合器外罩	Cluth Hood	1
2	204-7-2	离合器端盖	End Cover	1
3	204-7-3	离合器端盖密封垫	Gasket	1
4	204-7-4	主动齿轮外套	Sleeve	1
5	204-7-5	初级主动齿轮衬套	Bushing	1
6	204-7-6	从动片组合	Driven Plate Set	2
7	204-7-7	主动片(一)	Drive Plate (No.1)	1
8	204-7-8	主动片(二)	Drive Plate (No.2)	1
9	204-7-9	离合器主动盘	Drive Disk	1
10	204-7-10	离合器弹簧	Spring	4
11	204-7-11	离合器减震弹簧	Damping Spring	4
12	A00G043	离合器推杆组合	Push Rod Set	1
13	204-7-13	弹性挡圈	Collar	1

14	204-7-14	离合器垫圈	Washer	1
15	A00K016	初级从动齿轮组合	Primary Driven Gear	1
16	A00K015	初级主动齿轮	Primary Driven Gear Set	1
17	204-7-17	曲轴通油管	Oil Tube	1
18	204-7-18	通油管弹簧	Spring	1
19	204-7-19	通油套管	Sleeve	1
20	204-7-20	离合器大圆螺母	Lock Nut M14×1	1
21	204-7-21	离合器止退垫圈	Lock Washer 14	1
22	204-7-22	离合器碟形垫圈	Washer 14	1
23	A00K017	从动齿轮挡圈	Snap Ring	1
24	204-7-24	螺钉 M5×10	Screw M5×10	4
25	204-7-25	轴承 6000	Bearing 6000	1
26	204-7-26	离合器主体组合	Clutch Body	1

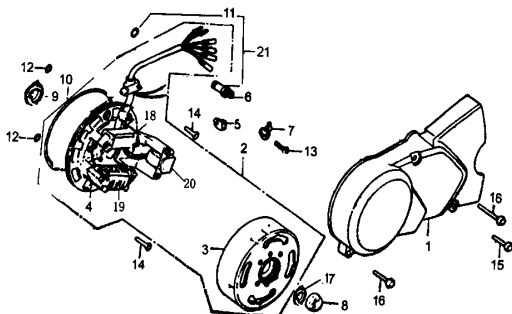


E-8 左曲轴箱盖 磁电机 Left Crankcase Cover & Magnetic Motor				
序号	零部件编码	零部件名称	零部件名称	数量
Ref.No.	Part No.	Description	Description	Quantity
1	204-8-1	左曲轴箱盖	Crankcase Cover,LH	1
2	204-8-2	磁电机总成	Magneto Assy	1
3	A01D060	磁电机转子组件	Rotor,Magneto	1
4	A0177D070	磁电机定子组件	Stator,Magneto	1
5	204-8-5	空档线密封块	Wire Seal Block	1
6	204-8-6	空档指示器	Indicator,Neutral	1
7	204-8-7	空档指示器压板	Press Plate	1
8	617710000BX-1	磁电机螺母M10×1.25	Lock Nut	1
9	204-8-9	曲轴左油封18.9×30×5	Seal Oil 18.9×30×5	1
10	204-8-10	O形圈107×2	O-ring 107×2	1
11	204-8-11	空档指示器O形圈7×1.7	O-ring 7×1.7	1
12	204-8-12	O形圈6.5×1.9	O-ring 6.5×1.9	2
13	204-8-13	螺钉M6×12	Screw M6×12	1
14	204-8-14	螺钉M6×14	Screw M6×14	2
15	204-8-15	螺栓M6×28	Bolt M6×28	1
16	81906035	平头螺钉M6×35	Bolt M6×35	2
17	204-8-17	垫圈	Washer	1
18	204-8-18	充电线圈	Charge Coil	1
19	204-8-19	照明线圈	Illumination	1
20	204-8-20	触发线圈	Induced Coil	1
21	204-8-21	空档指示器组合	Neutral Indicator Set	1

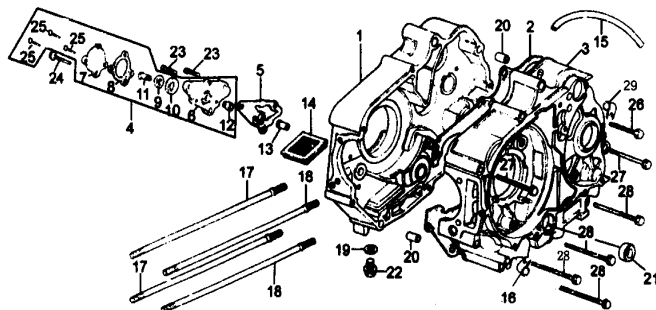


E-9 曲轴箱、机油泵 Crankcase & Oil Pump				
序号	零部件编码	零部件名称	零部件名称	数量
Ref.No.	Part No.	Description	Description	Quantity
1	204A020	右曲轴箱组件	Crankcase Sub-Assy, RH	1
2	E04B002	右曲轴箱盖密封垫	Gasket,Crankcase	1
3	2041A010	左曲轴箱组件	Crabkcase Sub-Assy, LH	1
4	204-9-4	机油泵总成	Oil pump	1
5	204-9-5	机油泵总成密封垫	Gasket,Oil pump	1
6	204-9-6	机油泵体	Boby, oil pump	1
7	204-9-7	机油泵盖	Cover, oil pump	1
8	204-9-8	机油泵盖密封垫	Gasket,Oil pump cover	1

9	204-9-9	机油泵内转子	Inner roater	1
10	204-9-10	机油泵外转子	Outer roater	1
11	204-9-11	机油泵轴	Shaft	1
12	204-9-12	机油泵总成	Sleeve	1
13	204-9-13	机油泵盖	Sleeve, Sprocket	1
14	D00C037	机油滤网组合	Filter set	1
15	D00L013	废气管	Air pipe	1
16	D00L039	高压线夹	Pipe Clamp	1
17	204M001	双头螺栓A	Bolt A, Cylinder	2
18	204M002	双头螺栓B	Bolt B, Cylinder	2
19	204-9-19	放油螺塞垫圈	Washer	1
20	97010014	定位销10×14	Dowel pin 10×14	2
21	D00C026	变档轴油封11.6×24×10	Oil seal 11.6×24×10	1
22	D00E026	放油螺塞	Drain plug	1
23	81906016	平头螺钉M6×16	Screw M6×16	2
24	204-9-24	螺钉M6×22	Screw M6×22	1
25	204-9-25	螺钉M5×10	Screw M5×10	3
26	96006050	带盘螺栓M6×50	Bolt M6×50	1
27	96006060	带盘螺栓M6×60	Bolt M6×60	2
28	96006065	带盘螺栓M6×65	Bolt M6×65	4
29	D00L014	废气管管夹	Clamp	1

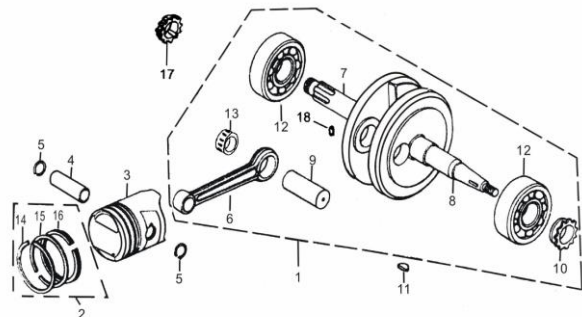


E-10	曲轴 活塞 Crankshaft & Piston			
序号	零部件编码	零部件名称	零部件名称	数量
Ref. No.	Part No.	Description	Description	Quantity
1	2043J000	曲柄连杆总成	Crankshaft & Connecting Rod	1
2	204J013	活塞环组合	Piston Ring Set	1
3	204J014	活塞	Piston	1
4	204J012	活塞销	Piston Pin	1
5	204-10-5	活塞销挡圈	Cirelip, Piston Pin	2
6	204-10-6	连杆	Connecting Rod	1
7	204-10-7	右曲柄	Crankshaft, RH	1
8	204-10-8	左曲柄	Crankshaft, LH	1
9	204-10-9	曲柄销	Pin, Crankshaft	1
10	204-10-10	正时主动链轮(16T)	Drive Sprocket, Timing(16T)	1
11	204-10-11	半圆键	Woodruff Key	1
12	204-10-12	轴承6304	Bearing 6304	2
13	204-10-13	连杆大头轴承	Bearing	1
14	204-10-14	活塞环(一)	Piston Ring(I)	1
15	204-10-15	活塞环(二)	Piston Ring(II)	1
16	204-10-16	油环组合	Oil ring, 3-piece	1
17	204-10-17	油泵齿	Oil pump Driving Gear	1
18	204-10-18	销	Set pin	1

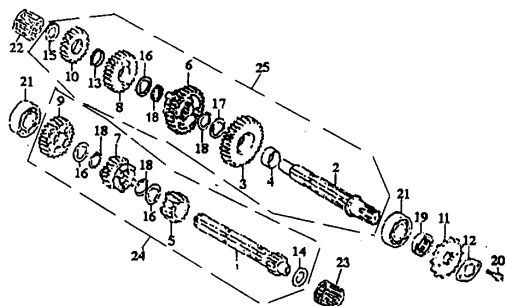


E-11	主轴、副轴 Transmission Shafts			
序号	零部件编码	零部件名称	零部件名称	数量
Ref. No.	Part No.	Description	Description	Quantity
1	204-11-1	转动主轴	MAIN SHAFT	1
2	204-11-2	转动副轴	COUNTER SHAFT	1
3	204-11-3	副轴一档齿轮	C-1 GEAR	1

4	204-11-4	衬套20×9	BUSH 20×9	1
5	204-11-5	主轴二档齿轮	M-2 GEAR	1
6	204-11-6	副轴二档齿轮	C-2 GEAR	1
7	204-11-7	主轴三档齿轮	M-3 GEAR	1
8	204-11-8	副轴三档齿轮	C-3 GEAR	1
9	204-11-9	主轴四档齿轮	M-4 GEAR	1
10	204-11-10	副轴四档齿轮	C-4 GEAR	1
11	D001K014	主动链轮	DRIVE SPROCKET 14T	1
12	204-11-12	固定板	DRIVE SPROCKET FIXING PLATE	1
13	204-11-13	垫圈(一)	Washer (No.1)	1
14	204-11-14	垫圈(一)	Washer (No.1)	1
15	204-11-15	垫圈(二)	Washer (No.2)	1
16	204-11-16	内花键垫圈	Washer	3
17	204-11-17	花键垫圈	SPLINE WASHER	1
18	204-11-18	弹性挡圈	Circlet	4
19	D001C008	副轴油封17×29×5	Oil Seal 17×29×5	1
20	578306008	螺栓M6×8	Bolt M6×8	2
21	2766203	轴承6203	Bearing 6203	2
22	204-11-22	滚针轴承NK13.5/2	Needle Bearing NK13.5/2	1
23	204-11-23	滚针轴承NK14/2	Needle Bearing NK14/2	1
24	204K030	主轴组合	Main Shaft Assy	1
25	204K040	副轴组合	Countershaft Assy	1

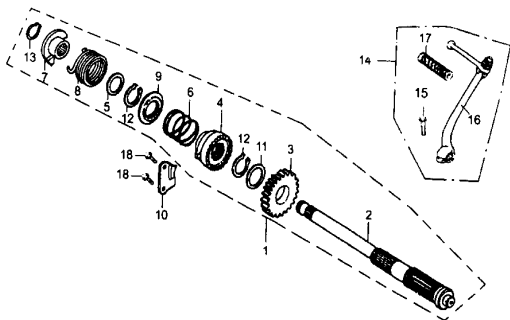

E-12	起动机构 Start Device			
序号	零部件编码	零部件名称	零部件名称	数量
Ref.No.	Part No.	Description	Description	Quantity
1	D001I000	起动轴组件	Starting Shaft Assy	1
2	204-12-2	起动轴	KICK STARTER SPOINDLE	1
3	204-12-3	起动齿轮	PINION KICK STARTER	1
4	204-12-4	棘轮	Ratcher	1
5	204-12-5	垫圈17mm	WASHER 17MM	1
6	204-12-6	弹簧	Spring	1
7	204-12-7	起动轴弹簧座	KICK SPRING RETAINER	1
8	204-12-8	起动轴复位弹簧	KICK STARTER SPRING	1
9	204-12-9	棘轮弹簧座	Spring Seat	1
10	204-12-10	棘轮导向板	Guide	1
11	204-12-11	止推垫圈20mm	THRUST WASHER 20MM	1
12	204-12-12	档圈20mm	SER RING 20MM	2
13	204-12-13	档圈16mm	EXTERNAL CIRCLIP 16MM	1
14	204-12-14	起动杆总成	Kick-pedal Assy	1
15	204-12-15	螺栓M6×20	Bolt M6×20	1
16	204-12-16	起动杆组合	Kick-edal	1
17	204-12-17	踏杆胶套	Rubber Boot	1
18	204-12-18	螺栓M6×20	Bolt M6×20	2

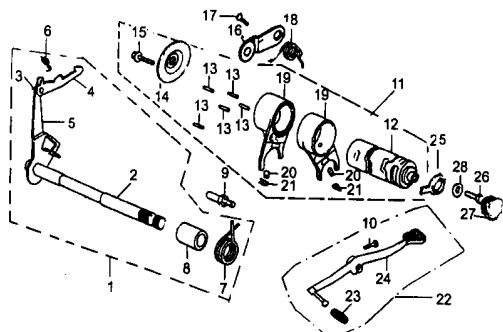

E-13	变档机构 Gear Shifting Device			
序号	零部件编码	零部件名称	零部件名称	数量
Ref.No.	Part No.	Description	Description	Quantity
1	C03K000	换挡臂组件	Gearshift Shaft Assy	1
2	204-13-2	换挡轴组合	Shaft, Gearshift	1

3	204-13-3	变档拨板组合	Shifter Set	1
4	204-13-4	副变档拨板	Shifter, Secondary	1
5	204-13-5	变档拨板	Shifter	1
6	204-13-6	变档拨板弹簧	Spring, Shifter	1
7	204-13-7	变档轴回位弹簧	Back Spring, Gearshift Shaft	1
8	204-13-8	轴套	Guide Sleeve	1
9	D00K024	换档臂定位螺栓	Shift Return Spring Pin	1
10	81906030	平头螺钉M6×30	Bolt M6×30	1
11	D091K060	变速鼓组件	Drum Set, Gearshift	1
12	204-13-12	变档鼓	Gear Shift Drum	1
13	204-13-13	档位指示销	Pin	5
14	204-13-14	档位指示销压板	Pressing Plate, Gearshift Indicator	1
15	81906016	平头螺钉M6×16	Bolt M6×16	1
16	204K070	变速鼓定位板	Locating Plate	1
17	204-13-17	变速鼓定位板螺栓	Screw	1
18	D001H009	变速鼓定位板弹簧	Torque Spring	1
19	204-13-19	拨叉(二)	Fork(II)	2
20	204-13-20	拨销	Guide pin	2
21	204-13-21	弹簧夹	Circlip	2
22	204-13-22	变档杆总成	Shift Lever As	1
23	204-13-23	变档杆胶套	Boot, Shift Lever	1
24	204-13-24	变档杆焊接组合	shift lever Weldment	1
25	204-13-25	空档指示器接触片	Contact Plate	1
26	204-13-26	内六角螺钉M6×16	Bolt M6×16	1
27	204-13-27	空档指示器油封	Oil Seal	1
28	204-13-28	弹性垫圈6	Spring Washer 6	1