



E-1 气缸头盖


Cylinder Head Cover

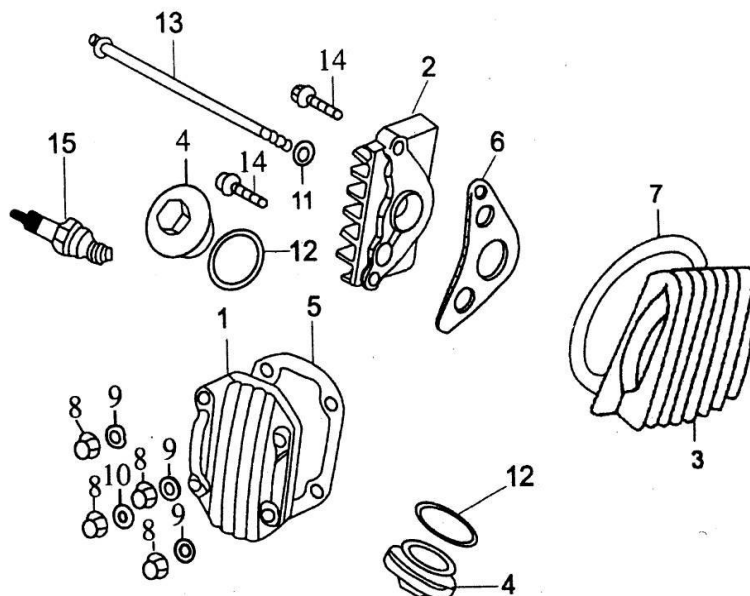

序号 Ref. No.	零部件编码 Part No.	零部件名称	Description	数量 Quantity
1	D01A036	气缸头盖	Cover, Cylinder Head	1
2	D00A035	气缸头右盖	Cylinder Head Cover, RH	1
3	D00A033	气缸头左盖	Cylinder Head Cover, LH	1
4	D00A032	气门盖	Cover, Valve	2
5	D00B009	气缸头盖密封垫	Gasket, Cylinder Head Cover	1
6	D00B007	气缸头右盖密封垫	Gasket, Cylinder Head Cover, RH	1
7	D00B006	气缸头左盖密封垫	Gasket, Cylinder Head Cover, LH	1
8	923060000	盖形螺母M6	Cap Nut M6	4
9	D00L017	铁垫圈6	Steel Washer 6	3
10	D00L012	铜垫圈6	Copper Washer 6	1
11	D00L020	铝垫圈6	aluminium Washer 6	1
12	D00C058	气门盖O型圈30.8×3.2	O-ring 30.8×3.2	2
13	96006110	螺栓M6×110	Bolt M6×110	1
14	96006020	螺栓M6×20	Bolt M6×20	2
15	D00D021	火花塞A7TC	Spark Plug A7TC	1

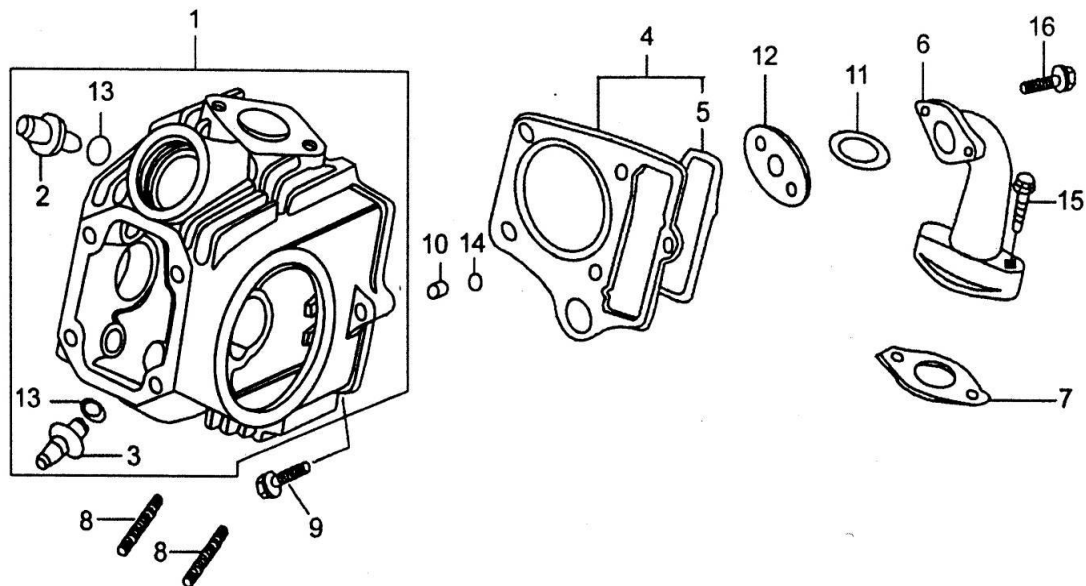


序号 Ref. No.	零部件编码 Part No.	零部件名称	Description	数量 Quantity
1	E00A000	气缸头组合	Cylinder Head Sub-Assy	1
2	D00A001	进气门导管	Guide, Intake Valve	1
3	D00A002	排气门导管	Guide, Exhaust Valve	1
4	E00B008	气缸头密封垫	Gasket, Cylinder Head	1
5	E01-2-5	链条腔封环组合	Gasket, Chain Bousing	1
6	L00JQ16	进气管	Inlet Pipe	1
7	D00B014	进气管密封垫	Gasket, Inlet Pipe	1
8	D00M009	双头螺栓M6×32	Stud M6×32	2
9	D00M015BCR	连接螺栓M6×23	Bolt M6×23	1
10	D00L040	翻边衬套Φ8×9	Sleeve Φ8×9	1
11	D00C059	O型密封圈25.4×2.4	O-Ring 27×2.0	1
12	D001C039	进气管胶木垫	Insulating Mat, Inlet Pipe	1
13	D00C047	导管O型圈9×1.6	O-Ring 9×1.6	2
14	D00C031	矩形圈9×11.7×1.5	Rectangular Ring 9×11.7×1.5	1
15	578306028BCR	螺栓M6×28	Bolt M6×28	2
16	578306022BCR	螺栓M6×22	Bolt M6×22	2

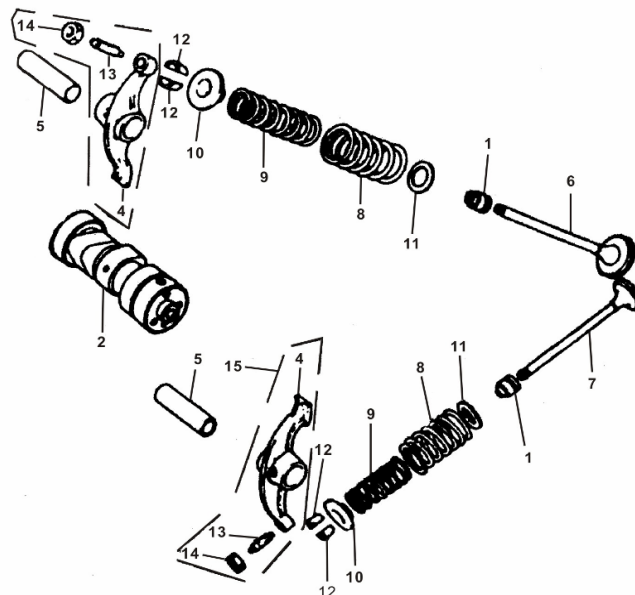


序号 Ref. No.	零部件编码 Part No.	零部件名称	Description	数量 Quantity
1	D00C043	挡油罩	Oil seal, Valve Stem	2
2	A00F020	凸轮轴组件	Camshaft Assy	1
4	D00F000	气门摇臂	Rocker Arm, Valve	2
5	D00F015	摇臂轴	Shaft, Rocker Arm	2
6	D00F045	进气门	Intake Valve	1
7	D00F039	排气门	Exhaust Valve	1
8	D00H003	气门外弹簧	Outer Spring, Valve	2
9	D00H004	气门内弹簧	Inner Spring, Valve	2
10	D00F034	气门内外弹簧座	Spring Retainer, Upper	2
11	D00F031	气门外弹簧座圈	Spring Retainer, Outer	2
12	D00F033	气门锁夹	Spring Cone, Valve	4
13	A00F001	气门间隙调节螺钉	Adjusting Screw, Valve Gap	2
14	A00F002	气门间隙调节螺母	Lock Nut	2
15	D00F000	气门摇臂组件	Rocker Arm Assy	2


E-4 正时链条 张紧器 Timing Chain & Tensioner

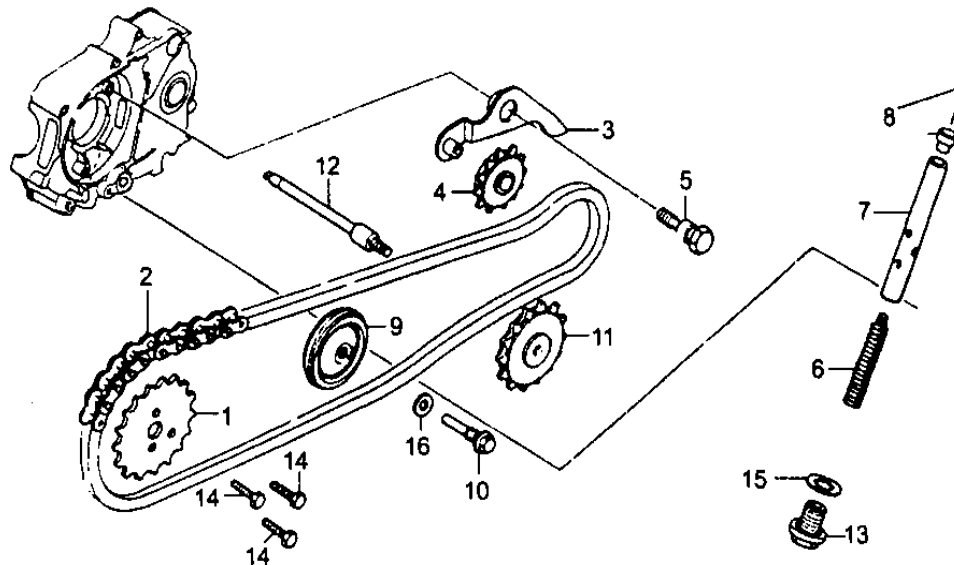


序号 Ref. No.	零部件编码 Part No.	零部件名称	Description	数量 Quantity
1	A00F011	正时从动链轮 (28T)	Timing Driver Sprocket (28T)	1
2	D00F012	正时链条 (84T)	Timing Chain (84T)	1
3	D00F043	链条张紧臂组件	Tensioning Arm	1
4	D00C020	链条张紧滚轮组件	Tensioning Roller	1
5	D00F044	链条张紧臂芯轴	Screw	1
6	D00H006	链条张紧杆弹簧	Spring	1
7	D00F042	链条张紧杆组件	Tensioning Bar	1
8	D00C022	链条张紧杆头	Cap	1
9	D00C023	链条导向滚轮组件	Guiding Wheel	1
10	D00F048	导向滚轮销轴	Pin, Guiding Wheel	1
11	D00E028	机油泵链轮	Drive Sprocket, Oil pump	1
12	D00E027	机油泵链轮轴	Sprocket Shaft, Oil pump	1
13	D00E025	密封螺塞14	Sealing Plug M14×1.5	1
14	578305012	六角螺栓M5×12	Bolt M5×12	3
15	D00L021	铝垫圈14	Aluminium Washer 14	1
16	D00L019	铝垫圈8	Aluminium Washer 8	1

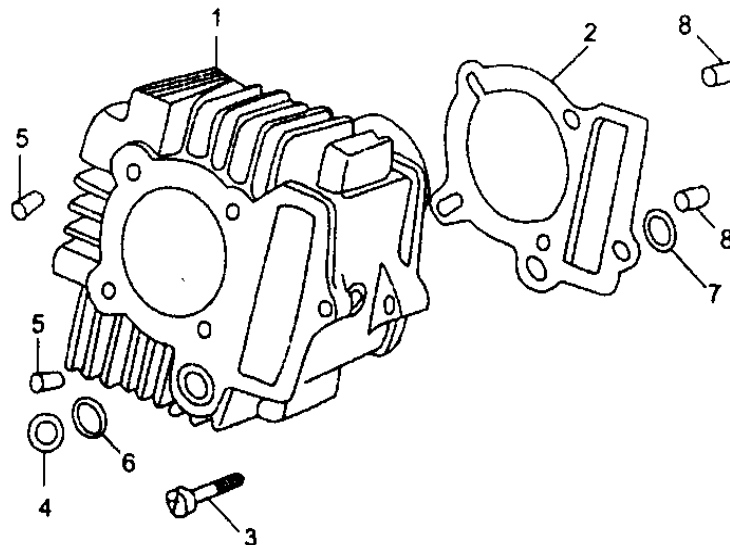


序号 Ref. No.	零部件编码 Part No.	零部件名称	Description	数量 Quantity
1	E00A038	气缸体	Cylinder Block	1
2	E00B010	气缸体密封垫	Gasket, Cylinder Block	1
3	D00M015	连接螺栓M6×23	Bolt M6×23	1
4		垫圈	Washer	1
5	97008014	定位销8×14	Dowel pin 8×14	2
6	D001L032	矩形密封圈14.5×18.5×2.4	Rectangular Ring 14.5×18.5×2.4	1
7	D00L033	矩形密封圈11.5×15.7×2.4	Rectangular Ring 11.5×15.7×2.4	1
8	97008012	定位销8×12	Dowel pin 8×12	2

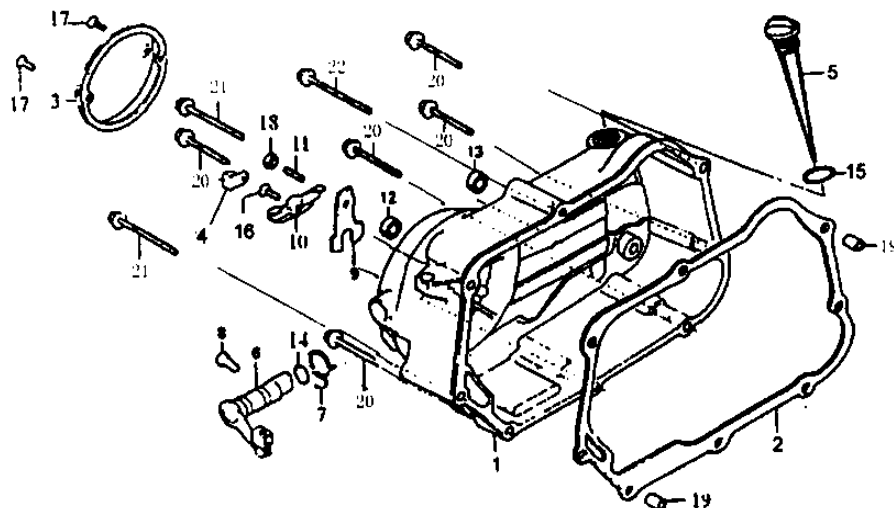

序号 Ref. No.	零部件编码 Part No.	零部件名称	Description	数量 Quantity
1	D02A034	右曲轴箱盖	Right Crankcase Cover	1
2	D00B002	右曲轴箱盖密封垫	Gasket, Crankcase Cover, RH	1
3	D01A039	小圆盖	Clutch Cover	1
4	D00L039	高压线夹	Cord Clip	1
5	D00C038	机油尺	Dipstick	1
6		离合器操纵杆组合	Operating Shaft, Clutch	1
7		离合器操纵杆弹簧	Spring	1
8		离合器操纵杆定位销	Set Pin	1
9		离合器拨板	Control Plate	1
10		离合器操纵杆压板	Press Plate	1
11		离合器调节螺杆	Screw	1
12	A00C012	推杆油封12×21×4	Oil Seal 12×21×4	1
13	D00C016	油封13.8×24.5	Oil Seal 13.8×24.5	1
14		O形圈	O-Ring	1
15	D00C060	O形圈18×3	O-Ring 18×3	1
16		螺钉M6×16	Screw M6×16	1

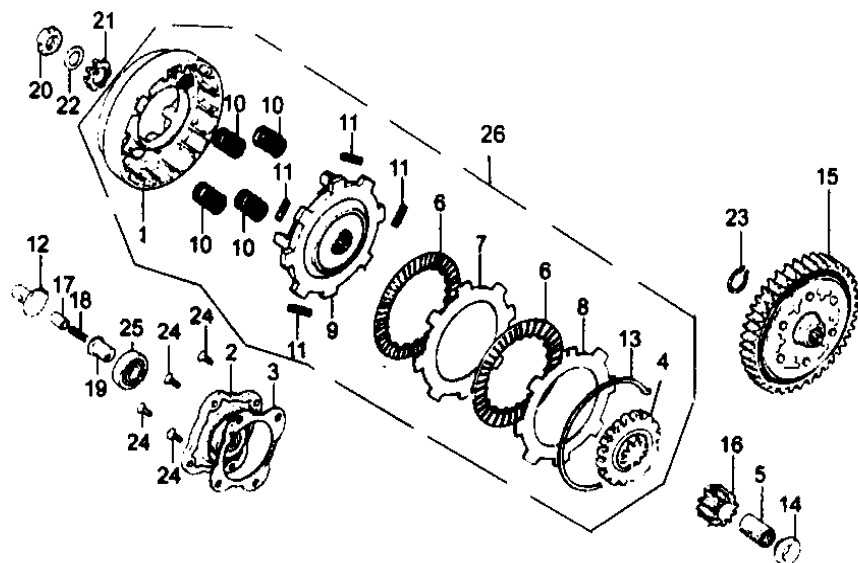


序号 Ref. No.	零部件编码 Part No.	零部件名称	Description	数量 Quantity
1	E05-7-1	离合器外罩	Cluth Hood	1
2	D02G029	离合器端盖	End Cover	1
3	D02B011	离合器端盖密封垫	Gasket	1
4		主动齿轮外套	Sleeve	1
5	E00J019	主动齿轴套	Bushing	1
6		从动片组合	Driven Plate Set	2
7		主动片(一)	Drive Plate (No.1)	1
8		主动片(二)	Drive Plate (No.2)	1
9	E05-7-9	离合器主动盘	Drive Disk	1
10	E05-7-10	离合器弹簧	Spring	4
11	E05-7-11	离合器减震弹簧	Damping Spring	4
12	A00G043	离合器推杆组合	Push Rod Set	1
13		弹性挡圈	Collar	1
14		离合器垫圈	Washer	1
15	A00K016	初级从动齿轮组合	Primary Driven Gear	1
16	A00K015	初级主动齿轮	Primary Driven Gear Set	1

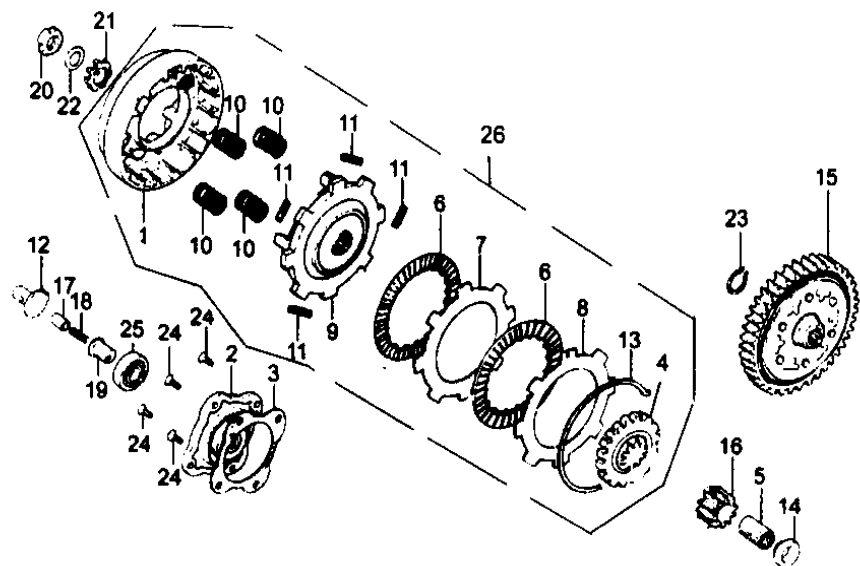


序号 Ref. No.	零部件编码 Part No.	零部件名称	Description	数量 Quantity
17	A00E024	曲轴通油管	Oil Tube	1
18	A00H001	通油管弹簧	Spring	1
19		通油套管	Sleeve	1
20	A00G055	离合器大圆螺母	Lock Nut M14×1	1
21	A00G022	离合器止退垫圈	Lock Washer 14	1
22	A00G052	离合器碟形垫圈	Washer 14	1
23	A00K017	从动齿轮挡圈	Snap Ring	1
24	81905010	螺钉 M5×10	Screw M5×10	4
25	2766000	轴承 6000	Bearing 6000	1
26	A00G060	离合器主体组合	Clutch Body	1


E-8 左曲轴箱盖 磁电机 Left Crankcase Cover & Magnetic Motor

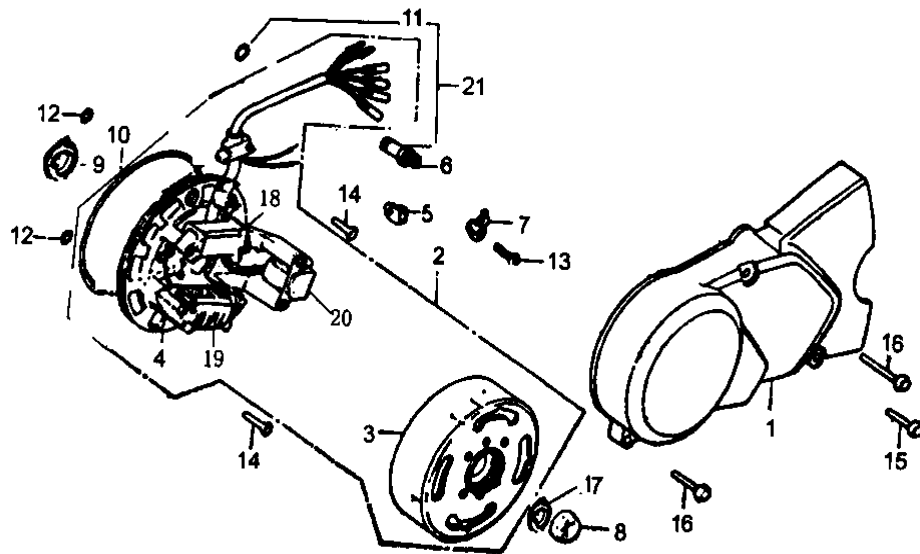


序号 Ref. No.	零部件编码 Part No.	零部件名称	Description	数量 Quantity
1	A01A070	左曲轴箱盖	Crankcase Cover, LH	1
2	D00D050	磁电机总成	Magneto Assy	1
3	A00D060	磁电机转子组合	Rotor, Magneto	1
4	A017D070	磁电机定子组合	Stator, Magneto	1
5		空档线密封块	Wire Seal Block	1
6	D001D040	空档指示器	Indicator, Neutral	1
7	D00L034	空档指示器压板	Press Plate	1
8	617710000	磁电机紧固螺母M10×1.25	Lock Nut	1
9	D00C028	曲轴左油封18.9×30×5	Seal Oil 18.9×30×5	1
10		O型圈107×2	O-ring 107×2	1
11		空档指示器O形圈7×1.7	O-ring 7×1.7	1
12		O形圈6.5×1.9	O-ring 6.5×1.9	2
13		螺钉M6×12	Screw M6×12	1
14		螺钉M6×14	Screw M6×14	2
15		螺栓M6×28	Bolt M6×28	1
16		螺栓M6×35	Bolt M6×35	2

E-8	左曲轴箱盖 磁电机	Left Crankcase Cover & Magnetic Motor
-----	-----------	---------------------------------------

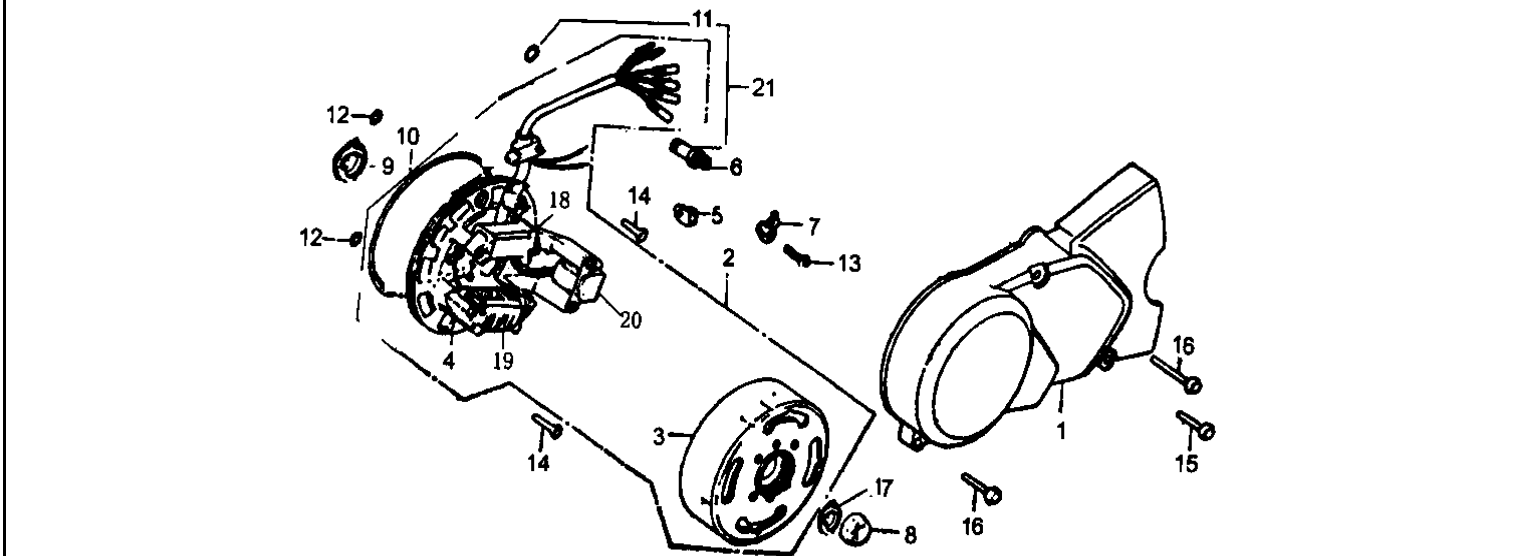
[illegible]

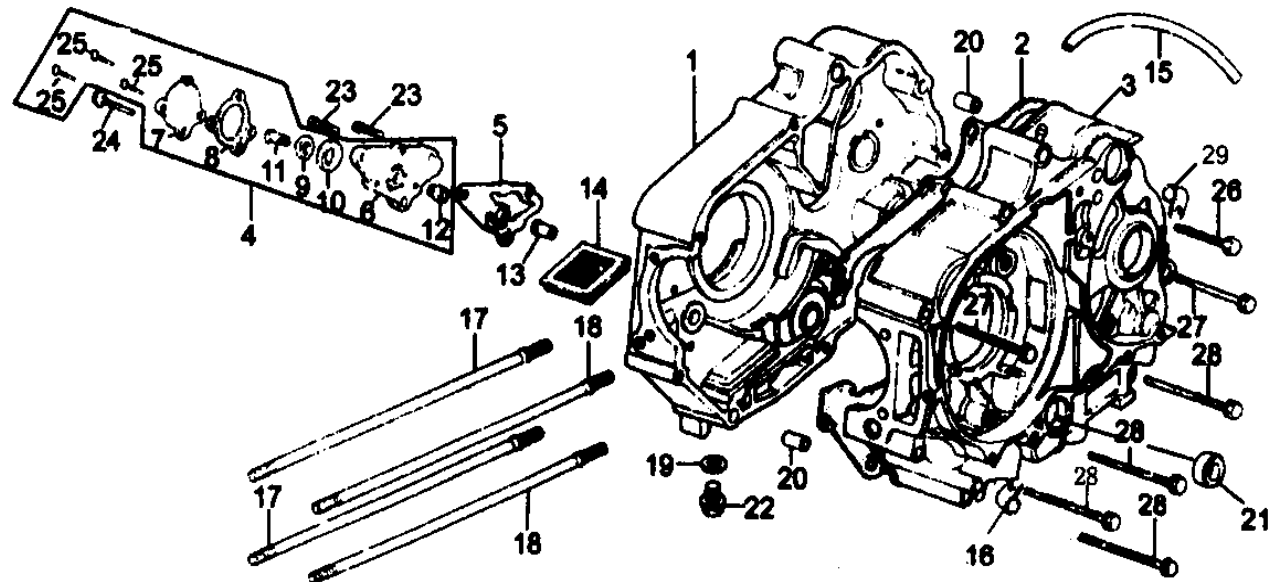


序号 Ref. No.	零部件编码 Part No.	零部件名称	Description	数量 Quantity
1	A00A020	右曲轴箱组件	Crankcase Sub-Assy, RH	1
2	D00B005	曲轴箱密封垫圈	Gasket, Crankcase	1
3	A01A010	左曲轴箱组件	Crabkcase Sub-Assy, LH	1
4	D01E000	机油泵总成	Oil pump	1
5	D00B017	机油泵总成密封垫	Gasket, Oil pump	1
6	E05-9-6	机油泵体	Boby, oil pump	1
7	E05-9-7	机油泵盖	Cover, oil pump	1
8	A00E008	机油泵盖密封垫	Gasket, Oil pump cover	1
9	D00E006	机油泵内转子	Inner roater	1
10	D00E007	机油泵外转子	Outer roater	1
11	D00E027	机油泵轴	Shaft	1
12	E05-9-12	机油泵轴套	Sleeve	1
13	D00E022	机油泵链轮轴套	Sleeve, Sprocket	1
14	D00C037	机油滤网组合	、	1
15	D00C024	废气管	Air pipe	1
16	D00L014	溢流管夹	Pipe Clamp	1

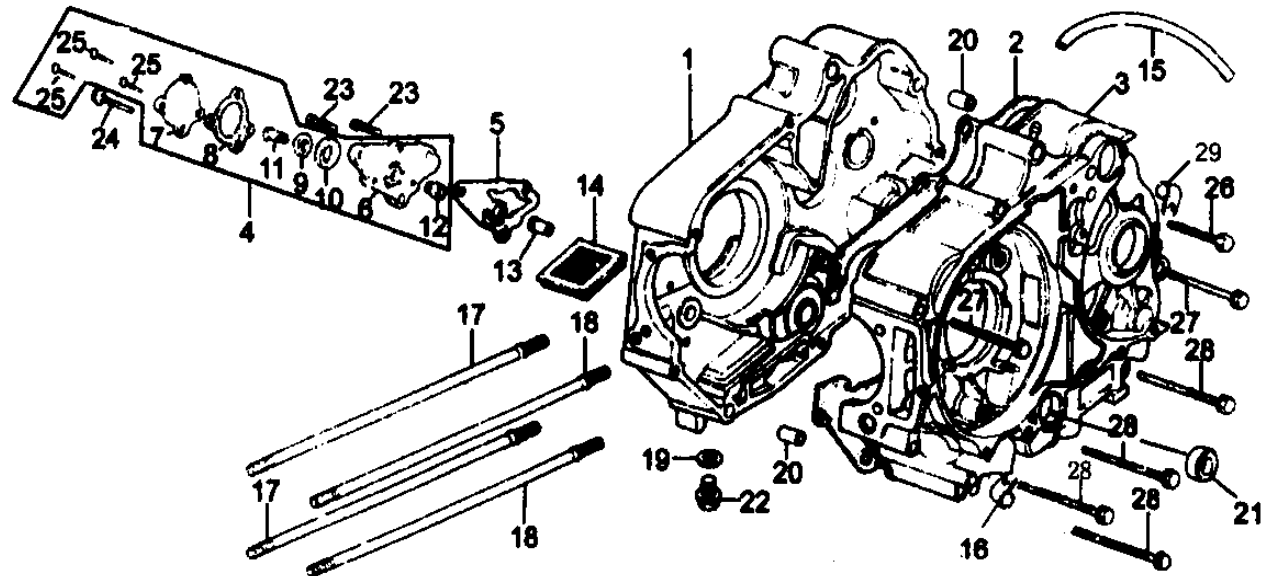


序号 Ref. No.	零部件编码 Part No.	零部件名称	Description	数量 Quantity
17	C00M001	双头螺栓A	Bolt A, Cylinder	2
18	C00M002	双头螺栓B	Bolt B, Cylinder	2
19	D00L022	放油螺塞垫圈	Washer	1
20	97010014	定位销10×14	Dowel pin 10×14	2
21	D00C026	变档轴油封11.6×24×10	Oil seal 11.6×24×10	1
22	D00E026	放油螺塞	Drain plug	1
23	81806016	螺钉M6×16	Screw M6×16	2
24	81806022	螺钉M6×22	Screw M6×22	1
25	81805010	螺钉M5×10	Screw M5×10	3
26		螺栓M6×50	Bolt M6×50	1
27		螺栓M6×60	Bolt M6×60	2
28		螺栓M6×65	Bolt M6×65	4
29	D00L191	废气管管夹	Clamp	1

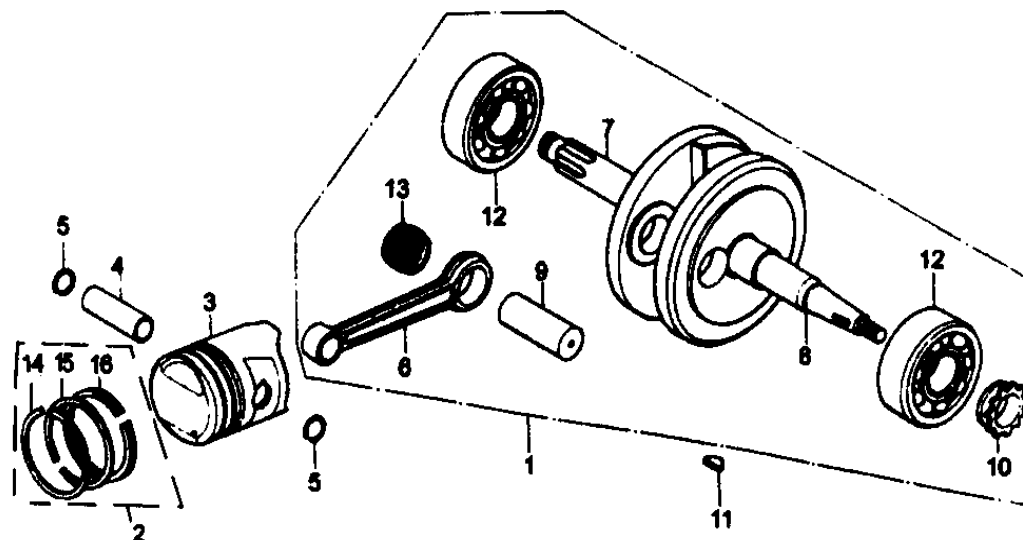


序号 Ref. No.	零部件编码 Part No.	零部件名称	Description	数量 Quantity
1	D012J000	曲柄连杆总成	Crankshaft & Connecting Rod	1
2	E001J013	活塞环组合	Piston Ring Set	1
3	E00J014	活塞	Piston	1
4	E00J012	活塞销	Piston Pin	1
5	D00J011	活塞销挡圈	Circumferential Piston Pin	2
6	D012J025	连杆	Connecting Rod	1
7	D012J005	右曲柄	Crankshaft, RH	1
8	D012J006	左曲柄	Crankshaft, LH	1
9	A00J007	曲柄销	Pin, Crankshaft	1
10	D012J002	正时主动链轮 (14T)	Drive Sprocket, Timing (14T)	1
11	D012J001	半圆键	Woodruff Key	1
12	2766304	轴承6304	Bearing 6304	2
13	A00J008	连杆大头轴承	Bearing	1
14	E001J009	活塞环(一)	Piston Ring(I)	1
15	E001J010	活塞环(二)	Piston Ring(II)	1
16	E001J015	油环组合	Oil ring, 3-piece	1

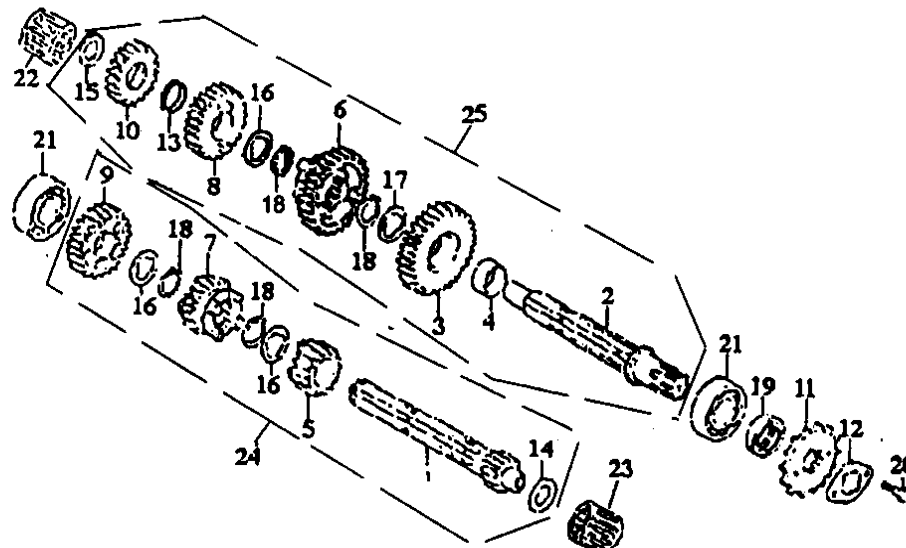


序号 Ref. No.	零部件编码 Part No.	零部件名称	Description	数量 Quantity
1	A00K031	转动主轴	MAIN SHAFT	1
2	A00K041	转动副轴	COUNTER SHAFT	1
3	A00K042	副轴一档齿轮	C-1 GEAR	1
4	A00K043	衬套20×9	BUSH 20×9	1
5	A00K032	主轴二档齿轮	M-2 GEAR	1
6	A00K045	副轴二档齿轮	C-2 GEAR	1
7	A00K033	主轴三档齿轮	M-3 GEAR	1
8	A00K046	副轴三档齿轮	C-3 GEAR	1
9	A00K034	主轴四档齿轮	M-4 GEAR	1
10	A00K047	副轴四档齿轮	C-4 GEAR	1
11	A00K014	主动链轮	DRIVE SPROCKET 14T	1
12	D00K013	固定板	DRIVE SPROCKET FIXING PLATE	1
13		垫圈(一)	Washer (No. 1)	1
14		垫圈(一)	Washer (No. 1)	1
15		垫圈(二)	Washer (No. 2)	1
16		内花键垫圈	Washer	3

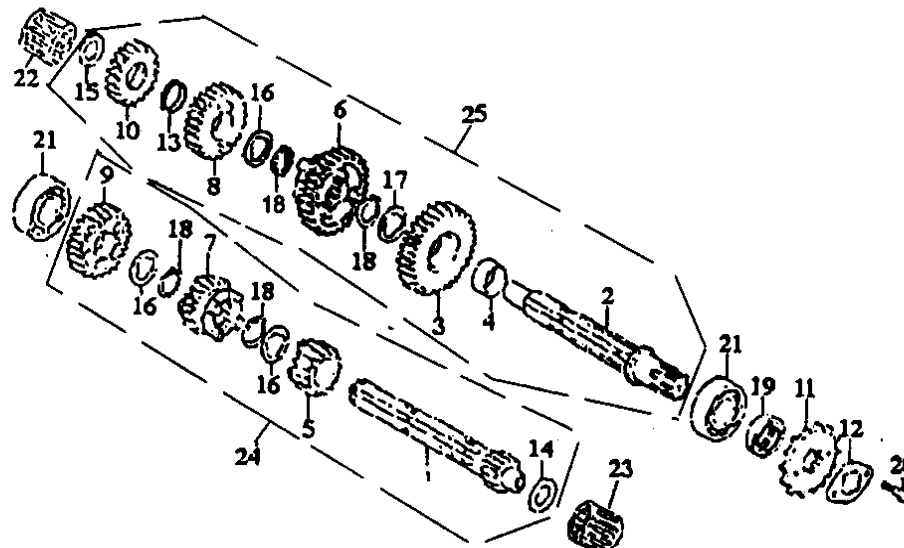


序号 Ref. No.	零部件编码 Part No.	零部件名称	Description	数量 Quantity
17	A00K055	花键垫圈	SPLINE WASHER	1
18		弹性挡圈	Circlet	4
19	D001C008	副轴油封17×29×5	Oil Seal 17×29×5	1
20		螺栓M6×8	Bolt M6×8	2
21		轴承6203	Bearing 6203	2
22		滚针轴承NK13.5/2	Needle Bearing NK13.5/2	1
23		滚针轴承NK14/2	Needle Bearing NK14/2	1
24	A00K030	主轴组合	Main Shaft Assy	1
25	A00K040	副轴组合	Countershaft Assy	1

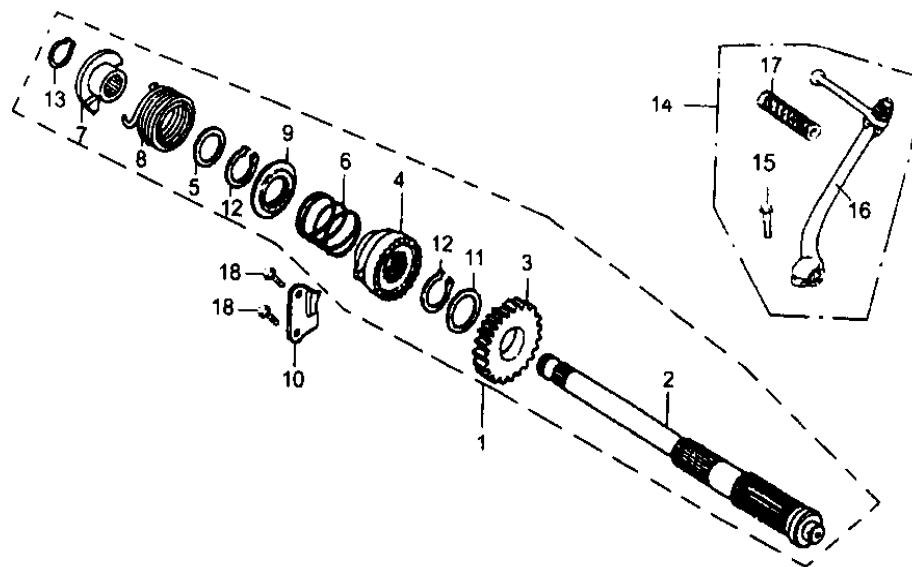


序号 Ref. No.	零部件编码 Part No.	零部件名称	Description	数量 Quantity
1	D01I000	起动轴组件	Starting Shaft Assy	1
2	D00I010	起动轴	KICK STARTER SPOINDLE	1
3	D00I009	起动齿轮	PINION KICK STARTER	1
4		棘轮	Ratcher	1
5	A00I008	垫圈17mm	WASHER 17MM	1
6		弹簧	Spring	1
7	D00I011	起动轴弹簧座	KICK SPRING RETAINER	1
8	D00I012	起动轴复位弹簧	KICK STARTER SPRING	1
9		棘轮弹簧座	Spring Seat	1
10		棘轮导向板	Guide	1
11	A00I004	止推垫圈20mm	THRUST WASHER 20MM	1
12	A00I002	档圈20mm	SER RING 20MM	2
13	A00I007	档圈16mm	EXTERNAL CIRCLIP 16MM	1
14	E05-12-14	起动杆总成	Kick-pedal Assy	1
15	578306020	螺栓M6×20	Bolt M6×20	1
16	E05-12-16	起动杆组合	Kick-edal	1

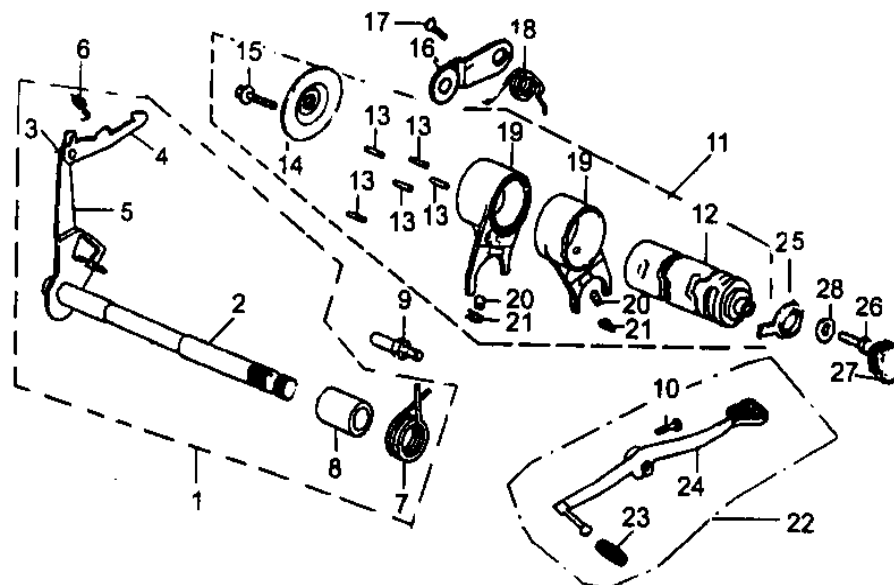


序号 Ref. No.	零部件编码 Part No.	零部件名称	Description	数量 Quantity
1	A01K000	换档臂组件	Gearshift Shaft Assy	1
2	D00K001	换档轴组合	Shaft, Gearshift	1
3	E05-13-3	变档拨板组合	Shifter Set	1
4		副变档拨板	Shifter, Secondary	1
5		变档拨板	Shifter	1
6	E05-13-6	变档拨板弹簧	Spring, Shifter	1
7	E05-13-7	变档轴回位弹簧	Back Spring, Gearshift Shaft	1
8		轴套	Guide Sleeve	1
9	D00K024	换档臂定位螺栓	Shift Return Spring Pin	1
10	578306030	螺钉M6×30	Bolt M6×30	1
11	A00K060	变档鼓组件	Drum Set, Gearshift	1
12	D00K066	变档鼓	Gear Shift Drum	1
13		档位指示销	Pin	5
14	E05-13-14	档位指示销压板	Pressing Plate, Gearshift Indicator	1
15	578906016	螺钉M6×16	Bolt M6×16	1
16	A00K070	变速鼓定位板	Locating Plate	1

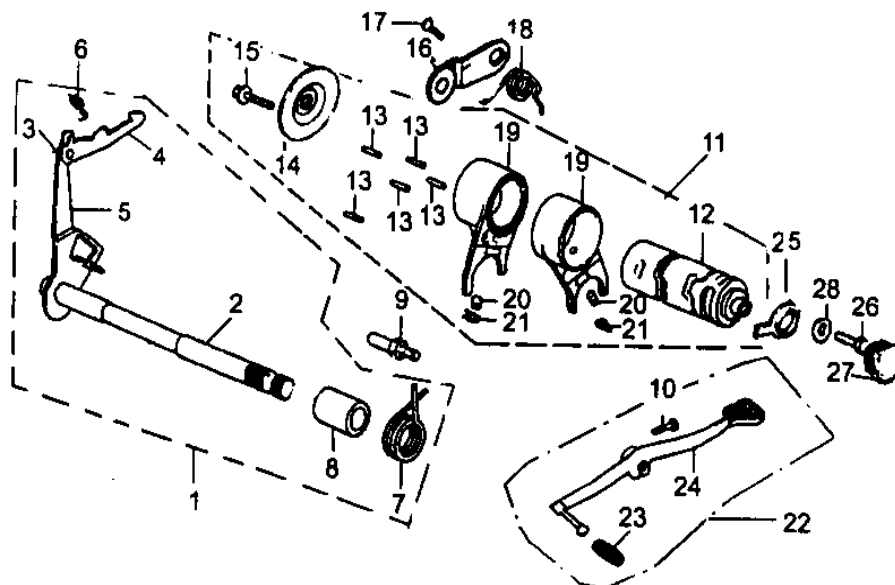

序号 Ref. No.	零部件编码 Part No.	零部件名称	Description	数量 Quantity
17	A00K071	变速鼓定位板螺栓	Screw	1
18	A00H009	变速鼓定位板弹簧	Torque Spring	1
19	E05-13-19	拨叉(二)	Fork(II)	2
20	A00K069	拨销	Guide pin	2
21	A00K063	弹簧夹	Circlip	2
22	E05-13-22	变档杆总成	Shift Lever As	1
23	E05-13-23	变档杆胶套	Boot, Shift Lever	1
24	E05-13-24	变档杆焊接组合	shift lever Weldment	1
25		空档指示器接触片	Contact Plate	1
26	7006014	内六角螺钉M6×16	Bolt M6×16	1
27		空档指示器油封	Oil Seal	1
28	93060000	弹性垫圈6	Spring Washer 6	1

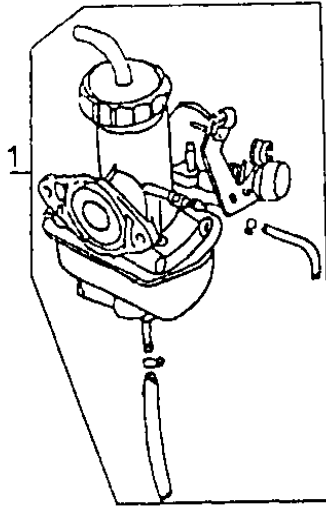

序号 Ref. No.	零部件编码 Part No.	零部件名称	Description	数量 Quantity
1	L004Q000	化油器总成	Carburetor Assy	1

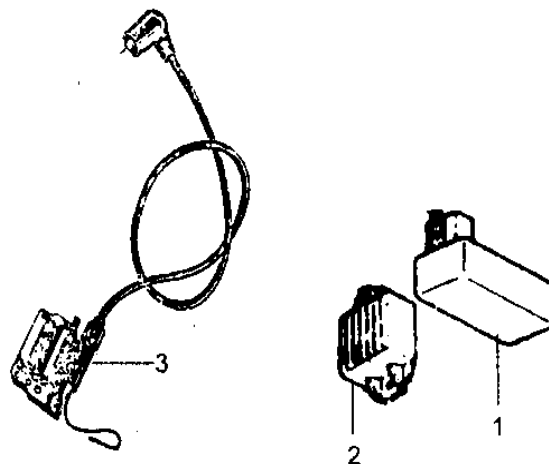

– 22 –

==