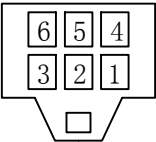






48V1000W Motor Controller Wire Layout

Color	Red	Green	Black	Black	Gray	Blue	Green	Yellow	Black		Red	Brown	Black	Black	Red/White	Brown	Yellow/Green	Blue	Green	Yellow	Black	Red
作用及功能	+5V	Accelerator	Ground -	Ground -	Brake Switch	Encoder C	Encoder B	Encoder A	Ground -		+5V	Power Switch	Ground -	Ground -	+Battery 48V	Reverse Switch	Low Gear Switch	Motor U	Motor V	Motor W	Ground -	+Battery 48V
	3	2	1	2	1	6	5	4	3	2	1	6	5	4	3	2	1	1	1	1	1	1
接头示意和编号																						
	White Socket 2.8 簧			White Socket 2.8簧		White Socket 2.8 簧						White Plug 2.8 片						2.5-6 Ring plate				
To Accelerator pedal			To Brake Switch			To Motor						To Main Wire						To Motor and Battery				

Electric Go kart Main Wire

Black	Blue	Green	Red	Brown	Yellow										
Power Switch	Ground -	Ground -	+Battery 48V	Reverse Switch	Low Gear Switch										
6	5	4	3	2	1										
						线长1950mm (6*0.3mm² 线芯)									
White Socket 2.8 簧															
To Controller															

Black	Red	Green	Black	Green	Yellow	Blue	Brown
Power Switch	+Battery 48V	Ground -	Power Switch	Ground -	Low Gear Switch	Ground -	Reverse Switch
2	1	2	1	2	1	2	1
							
White Socket 2.8簧		White Socket 2.8簧		White Socket 2.8簧		White Socket 2.8簧	
ON-OFF		Battery Indicator		High or Low		Forward and Reverse	